

WTT

INSTRUCTION SHEET

PRINT

SOFTWARE RIP Open your design
MEDIA SELECTION TheMagicTouch WTT Film
PRINT Mirrored image on matte finish side

PRE-HEAT

APPLICATION Place TheMagicTouch T-Pad smooth side up
TEMPERATURE 160 °C / 320 °F
TIME 10 seconds
PRESSURE High Pressure
PRESS To heat up the Press and TheMagicTouch T-Pad

STEP 1

APPLICATION (1) TheMagicTouch T-Pad must be warm
 (2) Place printed image of transparent film face up
 (3) Place your magenta or grey base paper face down on top of transparent film
 (4) Cover with TheMagicTouch Release Paper

TEMPERATURE 160 °C / 320 °F
TIME A4: 60 seconds | A3: 90 seconds
PRESSURE High Pressure

PRESS To add extra white to the transfer on the film

TRANSFER REMOVAL Leave TheMagicTouch Release Paper on magenta or grey base paper
 Immediately peel magenta or grey base paper in a smooth, flat, constant movement

STEP 2

APPLICATION Place your garment on the heat press
 Trim off edges of the film to avoid left over glue residue
 Place transparent film face down
 Cover with TheMagicTouch Release Paper

TEMPERATURE 160 °C / 320 °F
TIME 10 seconds
PRESSURE High Pressure

PRESS To apply the transfer on the fabric

TRANSFER REMOVAL Cold Peel

STEP 3

APPLICATION Cover Print with TheMagicTouch T-Seal face down

TEMPERATURE 160 °C / 320 °F
TIME 20 seconds
PRESSURE High Pressure

PRESS To seal transfer into the fibers of the fabric

TRANSFER REMOVAL Cold Peel

NOTES:

Only use with white toner printers. Local set-up can have an effect on time and temperature settings and end results.
 We highly recommend that before every usage of production runs, a test should be conducted on the specific fabric.
 Keep stored dry and at room temperature.
 First wash after 48 hours only, washing up to 40°C/104°F, do not use fabric softener/liquid detergent, or a high RPM. Do not tumble dry.

