
APPLICATION INSTRUCTIONS -


FlexCut Nylon


Low temperature PU film, designed to be heat transferred to most coated fabrics (such as nylon fabrics).



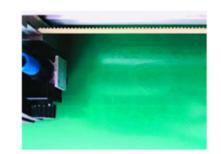

1. Cut mirrored

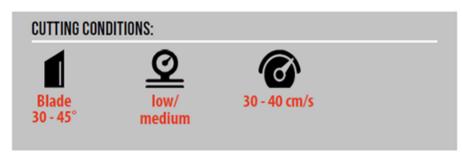

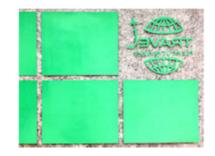


2. Weed design





3. Transfer design

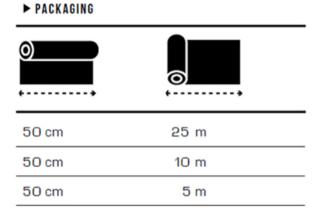



4. Remove liner, done!

Store in a cool and dry place; protect against the influence of light when stored. We recommend not to exceed a storage period of 18 months. The technical specifications rest on extensive tests and technical research. Due to the variety of possible influences during refinement, and use, the specifications should be viewed as reference values. We recommend a suitability test on the original material. A legally binding warranty of specific characteristics cannot be derived from our specifications.

